

Product Identification

The Powers Style Room Sensor is available with a wide selection of temperature sensing elements. An optional Bi-Metal Indicator can display room temperature; accurate to ± 1 °F. The display is protected by a view plate and comes standard with a 50 to 80 °F Legend. This legend is printed in dark brown on a tan background.

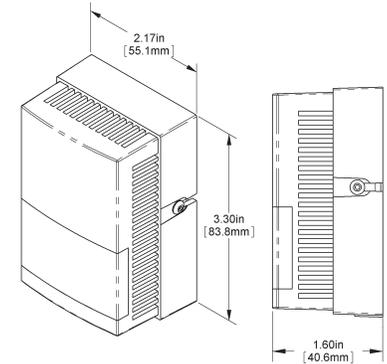


Fig. 1: Powers Style Room Sensor

Mounting

Mounting hardware is provided for only the drywall installation. Junction Box installation of the Powers Style room unit will require a BAPI Adaptor Plate. Order Part Number **BA/ADP-525-7-Color Code**.

Junction Box

1. Pull the wire through the wall and out of the junction box, leaving about six inches free.
2. Pull the wire through the hole in the adaptor plate and then through the hole in the base plate.
3. Secure the adaptor plate to the wall (following the adaptor plate instructions) and then secure the base plate to the adaptor plate using the #6-32 x 1/2 inch mounting screws provided.
4. Terminate the unit according to the guidelines in **Termination** on page 2.
5. Attach Cover by locating it over the top of the base plate, and then attaching it by tightening the side security screws with a 1/16" Allen wrench.

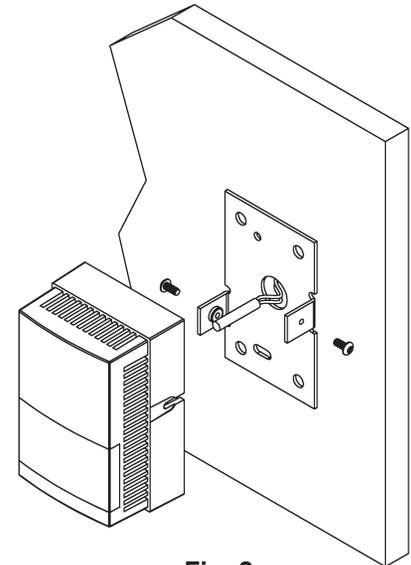


Fig. 2
Powers Style Drywall Mounting

Drywall Mounting

1. Place the base plate against the wall where you want to mount the sensor.
2. Using a pencil mark out the two mounting holes and the area where the wires will come through the wall.
3. Drill two 3/16" holes in the center of each marked mounting hole. Insert a drywall anchor into each hole.
4. Drill one 1/2" hole in the middle of the marked wiring area.
5. Pull the wire through the wall and out of the 1/2" hole, leaving about six inches free.
6. Pull the wire through the hole in the base plate.
7. Secure the base to the drywall anchors using the #6 x 1 inch mounting screws provided.
8. Terminate the unit according to the guidelines in **Termination** on page 2.
9. Attach Cover by locating it over the top of the base plate, and then attaching it by tightening the side security screws with a 1/16" Allen wrench.

NOTE: *In a wall-mount application, the wall temperature and the temperature of the air within the wall cavity can cause erroneous readings. The mixing of room air and air from within the wall cavity can lead to condensation, erroneous readings and premature failure of the sensor. To prevent these conditions, seal the conduit leading to the junction box and seal the hole in the drywall with fiberglass insulation*

Specifications subject to change without notice.

Termination

BAPI recommends using twisted pair of at least 22AWG and sealant filled connectors for all wire connections. Larger gauge wire may be required for long runs. All wiring must comply with the National Electric Code (NEC) and local codes.

Do NOT run this device's wiring in the same conduit as AC power wiring of NEC class 1, NEC class 2, NEC class 3 or with wiring used to supply highly inductive loads such as motors, contactors and relays. BAPI's tests show that fluctuating and inaccurate signal levels are possible when AC power wiring is present in the same conduit as the signal lines. If you are experiencing any of these difficulties, please contact your BAPI representative.

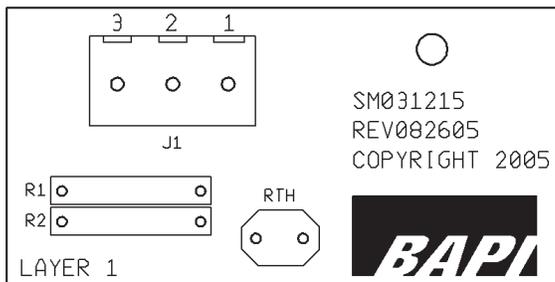


Figure 3:
Powers Circuit Board

Sensor Termination

Pin 1Sensor, To Analog Input of Controller
(Resistive Output)

Pin 2Sensor, To Analog Input of Controller
(Resistive Output)

Pin 3Not Used for Two Wire Sensors
(Three Wire Sensors use Pin 2 and Pin 3 as Common.
The odd wire connects to Pin 1.)

Specifications

Environmental Operation Range:

Temperature: 32 to 122 °F (0 to 50 °C)

Humidity: 0 to 95%, non-condensing

Material: ABS Plastic

Material Rating: UL 94, HB

Agency: CE Compliant (All Passive Thermistors 10KΩ and smaller are CE compliant.)

Specifications subject to change without notice.



Diagnostics

POSSIBLE PROBLEMS:

General troubleshooting

Temperature reading is incorrect

POSSIBLE SOLUTIONS:

- Determine that the input is set up correctly in the controller software and building automation software.
 - Check wiring for proper termination
 - Check for corrosion at either the controller or the sensor. Clean off the corrosion, re-strip the interconnecting wire and reapply the connection. In extreme cases, replace the controller, interconnecting wire and/or sensor.
 - Label the terminals that the interconnecting wires are connected to at the sensor end and the controller end. Disconnect the interconnecting wires from the controller and the sensor. With the interconnecting wires separated at both ends measure the resistance from wire-to-wire with a multimeter. The meter should read greater than 10 Meg-ohms, open or OL depending on the meter you have. Short the interconnecting wires together at one end. Go to the other end and measure the resistance from wire-to-wire with a multimeter. The meter should read less than 10 ohms (22 gauge or larger, 250 feet or less). If either test fails, replace the wire.
-
- Determine that the temperature sensors wires are connected to the correct controller input terminals and are not loose.
 - Check the wires at the sensor for proper connections.
 - Measure the physical temperature at the temperature sensor's location using an accurate temperature standard. Disconnect the temperature sensor wires and measure the temperature sensor's resistance across the sensor output pins with an ohmmeter. Compare the temperature sensor's resistance to the appropriate temperature sensor table on the BAPI website. If the measured resistance differs from the temperature table by more than 5% call BAPI technical support. Find BAPI's website at www.bapihvac.com; click on "Resource Library" and "Sensor Specs", then click on the type of sensor you have. Don't forget to reconnect the wires.
 - Make sure that the sensor leads are not touching one another.
 - Determine if the sensor is exposed to an external air source different from room environment, such as a conduit draft. If so, fill the junction box with fiberglass insulation or plug the conduit.